

OUTERIMPACT


Sig P365 M.R.A. (Modular Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.


Step 1: Remove existing rear sight from slide

Step 2: Install OUTERIMPACT dovetail onto slide.

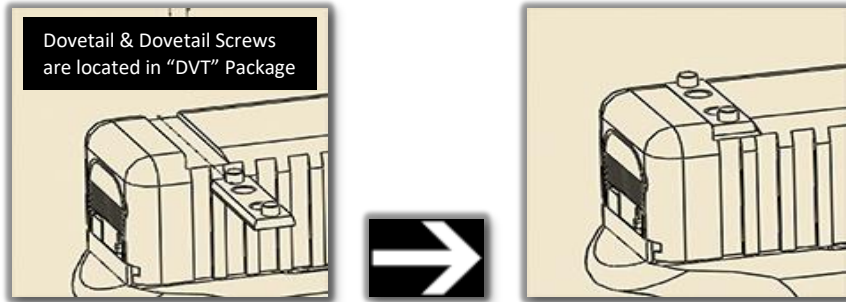

Step 3: Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

Step 4: Secure sight adapter to dovetail with supplied weaver screws. Torque to **25 in/lb.**

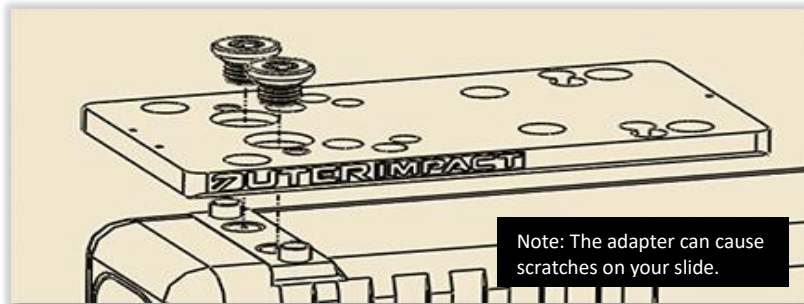

WARNING: Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

Step 5: Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and torque to **12 in/lbs**

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
	Vortex Burris UTG TrueGlo	Viper Fast Fire 3 Reflex Micro Dot	M3 x 8
	Burris Doctor Insight Eotech	Fast Fire 2 MRDS MRDS	M3 x 6
	Vortex	Venom	M3 x 6
	Trijicon Holosun	RMR 407c/507c	#6 Requires purchase of additional screws
	Leupold Shield	Delta Point Delta Point Pro RMS	Sight Supplied Screws work Requires additional screw purchase
	Vortex Sig Sauer CMORE	Razor Romeo 3, MAX, XL RTS & STS	M4

Note: The adapter has an intentional curve. This curve will flatten out when mounted.

Utilize liquid thread locker upon final installation of all threaded fasteners